

Manual AZOB01

Compared to other products on the market:

1. Device hardware and software: before gate opener use second hand communication model on products, it caused communication interruption, device crash, control failure, etc. unstable events often occur

now G202 PLUS and G203 use all new hardware and new software, very stable and smooth

2. Users storage: before G202 WH-120 WH-120pro WH-120 WH-120pro only support 200 users, **now the G202 PLUS and G203 support users 999**

3. Security control settings: before G202 WH-120 WH-120pro WH-120 WH-120pro wh-120 wh-120 pro , if someone else have the device password, they can control it do not need authorize.it is not safe.

but G202 PLUS and G203 , only the authorized users can control it and check its status.

4.Super admin settings: before G202 WH-120 WH-120pro WH-120 WH-120pro can not set super admin or admin to manage users and monitor the device status, it is not good to monitor device status and manage all users,

now G202 PLUS and G203 can set a super admin user to monitor the device status and manage all users.

5.Relay on time settings: before G202 WH-120 WH-120pro WH-120 WH-120pro support relay keep 0-9.5s on, **now G202 PLUS support 0-999s ,G203 support 0-9999s**

G202 plus and G203 also support keep relay always on until you off it.

6.Checking all users with one commands: before G202 WH-120 WH-120pro WH-120 WH-120pro only support checking authorized users one by one ,

now G202 PLUS and G203 support checking all users list with one commands

7. Security authorize :before G202 WH-120 WH-120pro WH-120 WH-120pro , all the users can authorize new users to control the device, it is not safe for safety and property.

now G202 PLUS and G203 only support super admin and admin to authorize new users, it is very safe

8.Super admin function:before G202 WH-120 WH-120pro WH-120 WH-120pro only send status relay to the user who controlled it,

now G202 PLUS and G203 support super admin to monitor all relay action feedback, and note by who's phone number operate.

9. additional notification push function : what's more, super admin can authorize MAX 2 phone number to receive all relay action feedback, even if the 2 users are not authorized in the 999users list.

Manual AZOB01

Check the relay status	1234#RELAY? 0000#RELAY?	Check the relay status on or off	All authorized users
Check the signal value	1234#CSQ? 0000#CSQ?	Check the signal value	All authorized users
Check users	1234#TEL 【user ID】 ?	Check the user phone number by user ID	Super(admin) users
	1234#QRYTEL 【phone number】 ?	Check the users by phone number	Super(admin) users
	1234#TELALL ?	Check all users	Super(admin) users
Delete users	1234#TEL# 【user ID】 #	Delete users by user ID, the super admin user can not be deleted	Super(admin) users
	1234#DELTEL# 【phone number】 #	Delete the user by phone number, the super admin user can not be deleted	Super(admin) users
Change Super(admin) password	1234#PWD 【new password】 #PWD 【new password】 #	Change the super(admin) password password rules: The number of digits is 4-12 characters, case-sensitive, and letters and numbers are supported.	Only super admin
Change normal user password (only G203 support this)	1234#NORPWD 【new password】 #NORPWD 【new password】 #	Change the normal user password password rules: The number of digits is 4-12 characters, case-sensitive, and letters and numbers are supported	Only super admin
Set the relay delay time (G202PLUS)	1234#GOT 【time】 #	Set the relay closing time, the relay will follow this setting time after closing, and then disconnect, the delay time can be set 0-999s	Super(admin) users
Set the relay delay time (G203)	1234#GOT 【time】 #	Set the relay closing time, the relay will follow this setting time after closing, and then disconnect, the delay time can be set 0-9999s	Super(admin) users

Check the relay delay time	1234#GOT?		Super(admin) users
Allow all phone number call to access relay	1234#AA#	Allow all phone number call to access it	Super(admin) users
Only allow authorized users access it	1234#AU#		Super(admin) users
Check who can access device	1234#AC?		Super(admin) users
add notification push users (only G203 support)	1234#PUSH 【phone number】 #	Add Max 3 extra users to receive all relay action feedback, (the super admin default be the nitofication push user), the other 2 notification users do not be included in the 999users	Super(admin) users
Check all notification push users	1234#PUSHALL?		Super(admin) users
Delete notification push users (only G203 support this)	1234#DELPUSH# 【phone number】 #	After delete, will not receive the relay action feedback	Super(admin) users
Allow SMS feedback	1234#R#	Default open the SMS feedback	Super(admin) users
Do not allow SMS feedback	1234#N#		Super(admin) users
Check the notification push status	1234#M?		Super(admin) users
Modify your own phone number	1234#MODETEL# 【new phone number】 # 【new phone number】 #	Modify your phone number to a new, your old phone number will lost all permission after modified	Super(admin) users
Remote reset	1234#RESET#	Delete all settings, the super admin will receive one SMS to inform reset successfully	Only super admin user
Remote reboot	1234#REBOOT#	Reboot the device, but	Only super admin user

Command name	Commands list, All the commands do not attach "[]" super(admin) pwd: 1234 normal users pwd: 0000	Note	Who can use the commands
Authorize super(admin) users	1234#TEL 【phone number】 #DEF#	This command to authorizes the new user to be the super(admin) user, and automatically assign a user ID, the user ID is 001-999 (The first user authorized is the super administrator user by default)	Super(admin) users
	1234#TEL 【phone number】 # 【user ID】 #	This command authorizes the new user to be the super(admin) user, you need edit the user ID by yourself. (User ID rules: English letters, numbers or combinations, if it is a pure number within 3 digits, it will be the user ID.)	Super(admin) users
Authorize normal users (only G203 support to normal users)	1234#NORTEL 【phone number】 #DEF#	This command authorizes a new phone number to be a normal user, and automatically assign a user ID, the user ID range is 001-999	Super(admin) users
	1234#NORTEL 【phone number】 # 【user ID】 #	This command authorizes the new user to be a normal user, you need edit the user ID by yourself (User ID rules: English letters, numbers or combinations, if it is a pure number within 3 digits, it will be the user ID.)	Super(admin) users
Calling to access	-	Calling to access the device, device will hang up automatically	All authorized users
Relay on	1234#ON# 0000#ON#	Relay on by SMS, if there is relay delay time settings, the relay on time follow the relay delay setting.	All authorized users
Keep relay always on	1234#KPON# 0000#KPON#	Keep the relay on , until you off it by SMS or call	All authorized users
Relay off	1234#OFF# 0000#OFF#	Relay off	All authorized users