

D4 Remote Control Manual

Copy and work for: fixed code/learning code remote control, some popular rolling code remote controls in China, Europe, North, South America and Australia in the follow table.

Compatible brands (Global market):

AN MOTOR AT-4 / AT-4N	ATA PTX4	BFT MITTO2 MITTO4 (old version)	BENINCA TO GO WV BENINCA TO.GO-VA
Codiplug NOV2 Codiplug UNIK	Centurion NOVA	CAME NA ,EV ,EE	DEA MIO TR2
DOORHAN TX4	FAAC XT4 433RC FAAC XT4 SLH LR	FADINI JUBI	GBD AU1600
KEY TXB-42R,TXB-44R, TXG-44R,SUB-44R	MotorLine MX4SPDSM MotorLine Falk	NICE FLORS Nice Smilo	NOVOFERM
PUJOL VARIO	Peccinin TX3C	ROSSI	SEAV BeHappy RSX NEW
DASPIM	RLG	SEM002-02	SONEX
RKA2-(C)	CUPPON-(D)	ACZ49-(B)	AUTOTECH SM-50P
BISEN (T18、 T19)	DOORMAN	AAVAQ	Dooya (DC250)
Zhongtian(A,B)	SUPERLIFT S60/ S66/SF-650	HILAND T6520/T6522	Seaside (C600 New)



Remark:

Specially for **ACZ49-(B)**, **RKA2-(C)**, **Codiplug NOV2** and **Codiplug UNIK**, as these 4 brands only 2 buttons, one set of buttons will be copied simultaneously, i.e button1&2, button 3&4.);

Copying the brands *Zhongtian*, *Superlift*, *AAVAQ*, *Door Man*, and *Hangzhou Hiland* will automatically generate data for all four buttons.

Memory Clearance:	Single- Button Clearance Code:
Press the button1 and the button2 at the same time, the LED flashes 3 times.Release button 2 (Keep pressing button 1), and press button 2 slowly for 3 times, LED flashes quickly, and all information is cleared.	Press the button1 and the button2 at the same time, the LED flashes 3 times. Release button 2 (Keep pressing button 1). Press the button that needs to be coded twice, wait for 2 seconds, the LED flashes continuously, clear the button information. This function is not available when the copy data is a brand remote control.

One-key copy: For most fixed code and AUTOTECH SM-50P , CUPPON-(D)	Copy four keys together: For most rolling code, (except Codiplug NOV2、Codiplug UNIK、DAPSIM)
(1) to copy the buttons one by one. (except Codiplug type)	1. Press and hold the first button of the copy remote control, after the LED flashes twice, short press the second button 3 times, the LED flashes 3 times. Enter the four-button continuous copy mode.
(2) Copy face to face, press and hold the button of the original remote control, the LED of the copy remote control flashes 3 times and then stays on, which means that the code has been copied successfully	2. copy face to face, press and hold the button of the original remote control, the LED of the copy remote control flashes 3 times, which means that the current code has been copied successfully.
(3) Other buttons are the same as the above button copy method.	

Resume:

Press and hold both of the "3" and "4" button on the copy remote at the same time until the LED flashes rapidly, and the information of the last code is restored.

Special BFT copy (MITT02/MITT04) method
(1) Hold the first button of the copy remote control, the LED flashes twice and press the second button once to enter the copy BFT brand remote control mode. (After the seed copy is successful, short press the second button twice again, the LED flashes 3 times, and enter the BFT continuous copy 4 button mode)
(2) Press the front two buttons of the BFT at the same time, the copy remote control LED flashes twice, and the seed copy is successful. Release the BFT brand remote control button, press any button of the BFT remote control, the copy remote control LED flashes 3 times and then stays on, which means that the code has been successfully copied.
BFT seed sending: Press the first button and the fourth button of the copy remote control at the same time, the copy remote control sends BFT seeds.

FAAC XT4 SLH LR seed sending:

Pressing the first button and the fourth button of the copy remote control Simultaneously, and the LED flashes rapidly, press the button that needs to send the seed, and the copy remote control will transmit the seed code for the selected button.

CODIPLUG NOV2 & CODIPLUG UNIK & DAPSIM copy method:
1. Copy 1st button and 2nd button : Keep holding the first top button (1st button) of D4 remote control, when LED flashes twice and goes out, then press the 2nd button twice shortly, still holding 1st button and press any button of CODIPLUG, when LED of D4 flashes 3 times and stays on, it means D4 has copied CODIPLUG remote control well. Please note that at this moment the 2 buttons of CODIPLUG have been copied by this step.
2. Copy 3rd button and 4th button: Keep holding the 3rd button of D4, when LED flashes twice and goes out, press the 4th button of D4 twice shortly, still holding the 3rd button and press any button of a new CODIPLUG remote control, when LED of D4 flashes 3 times and stays on, it means D4 has copied this new CODIPLUG remote control completely.