

# D5 Remote Control Duplicator

## Copy 2 remote controls just by one

Remain holding button 2 and 3 for more than 2 seconds, the LED flashes in red (or blue), the duplicator is ready to copy another remote control; repeat holding button 2 and 3, the LED flashes in blue (or red), the duplicator returns to the previous remote control.

In a word, use button 2+3 to switch between two remote controls you copied or want to copy.


According to the LED color, red or blue, you can distinguish the remote controls copied easily.



Original Remote



Clone Remote

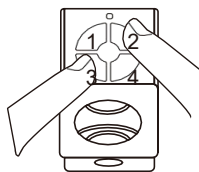


Change Remote

## Here is the way of copy


### Memory clearance

1. Press button 1 and 2 simultaneous until LED flashes 3 times.
2. Release button 2 (Keep pressing button 1), and press button 2 slowly for 3 times, LED flashes quickly.
3. Release both buttons, the duplicator is ready for copying.

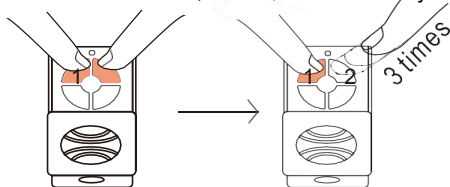

### Duplicating

Put duplicator aside of original transmitter, as close as possible.

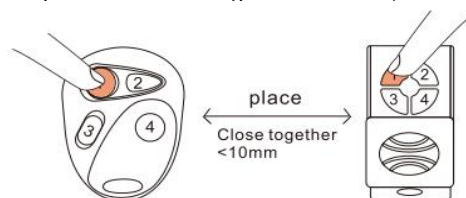

### Fixed Code Remote Control:

Press and hold button 1 of original transmitter, then press and hold button 1 of duplicator until you see the duplicator LED flashes means the duplicating succeed.

Repeat above step to the rest buttons. The duplicator will work after duplicating.


### Rolling Code Remote Control (except Codiplug NOV2、Codiplug UNIK、DAPSIM):

Press and hold button 1 of original transmitter, then press and hold button 1 of duplicator until you see the duplicator LED flashes means the duplicating succeed.

Once 1 button duplicated, the rest buttons will generate automatically, please follow original receiver manual to insert the new duplicator on the receiver.

### Resume:

If you erase the code by mistake, you can resume it by pressing and hold both of the "3" and "4" button on the remote controllers at the same time, after 10 seconds, the LED flashes 2 times and turn off which indicates the code of the copy remote controller is resumed.

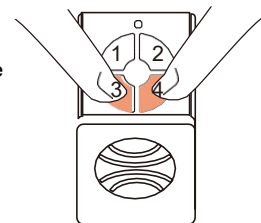

### Remarks:

For fixed code&learning code remote controls, the duplicator will work after duplicating. But for the rolling code brand listed below, please follow the original manual to program the duplicator to receiver after duplicating.

### The Chipset Compability : All of Fixed Code and Learning Code

2260(All the manufacturers)

PT2264,5326(All the manufacturers)

HT6014,SMC918 Series,527(All the manufacturers)

2240(All the manufacturers)

2262(All the manufacturers)

SC5262,HT600,HT680,HT6207,HT6010,HT6012,

1527(All the manufacturers)

Parts of singlechip: CAME TOP432NA/EV/EE

## Some 433Mhz Brands Compatible (Rolling Code) :

<b>AN MOTOR</b> AT-4 / AT-4N	<b>ATA</b> PTX4	<b>AUTOTECH</b> SM-50P	<b>BFT MITTO2 MITTO4</b> (old version)
<b>BENINCA TO GO WV</b> BENINCA TO.GO-VA	<b>Codiplug NOV2</b> Codiplug UNIK	<b>Centurion NOVA</b>	<b>CAME</b> NA ,EV ,EE
<b>DEA MIO TR2</b>	<b>DOORHAN TX4</b>	<b>FAAC XT4 433RC</b> <b>FAAC XT4 SLH LR</b>	<b>FADINI JUBI</b>
<b>GBD AU1600</b>	<b>KEY</b> TXB-42R, TXB-44R, TXG-44R, SUB-44R	<b>ROSSI</b>	<b>MotorLine</b> MX4SPDSM MotorLine Falk
<b>NICE FLORS</b> Nice Smilo	<b>NOVOFERM</b>	<b>Peccinin TX3C</b>	<b>SEAV</b> BeHappy RSX NEW
<b>PUJOL VARIO</b>	<b>DASPIM</b>	<b>RLG</b>	<b>SEM002-02</b>
<b>SONEX</b>	<b>RKA2-(C)</b>	<b>CUPPON-(D)</b>	<b>ACZ49-(B)</b>
<b>BISEN (T18, T19)</b>	<b>DOORMAN</b>	<b>AAVAQ</b>	<b>Dooya (DC250)</b>
<b>Zhongtian(A,B)</b>	<b>SUPERLIFT</b> S60/ S66/SF-650	<b>HILAND</b> T6520/T6522	<b>Seaside (C600 New)</b>



### Remark:

Specially for **ACZ49-(B)**, **RKA2-(C)**, **Codiplug NOV2** and **Codiplug UNIK**, as these 4 brands only 2 buttons, one set of buttons will be copied simultaneously, i.e button1&2, button 3&4.) ;  
Copying the brands *Zhongtian*, *Superlift*, *AAVAQ*, *Door Man*, and *Hangzhou Hiland* will automatically generate data for all four buttons.

### Special Programming Steps for BFT MITTO2 & MITTO4 (old version)

1. Memory clearance.
2. Press and hold button 1 of duplicator till LED flashes twice and off, press button 2 once while keep holding button 1, the duplicator into BFT copying mode.
3. Press and hold button 1st & 2nd of BFT simultaneous (seed code sending mode), LED on duplicator will flashes twice and off, release both BFT buttons and then press any button of BFT, LED on duplicator will flashes three times then stay on, which indicates BFT copying done.

**Remarks:** button 1 of duplicator keep pressed from step 2 till 3 done.

**Duplicator to send seed code of BFT:** Press button 1 & 4 simultaneous.

### FAAC XT4 SLH LR seed sending:

Pressing the first button and the fourth button of the copy remote control Simultaneously, and the LED flashes rapidly, press the button that needs to send the seed, and the copy remote control will transmit the seed code for the selected button.

### Codiplug NOV2 & Codiplug UNIK & DAPSIM Copy Method:

- 1) Keep holding the first top button (1st button) of D5 remote control, when LED flashes twice and goes out, then press the 2nd button twice, still holding 1st button and press any button of CODIPLUG, when LED of D5 flashes 3 times and stays on, it means D5 has copied CODIPLUG remote control well. Please note that at this moment the 2 buttons of CODIPLUG have been copied by this step.
- 2) Keep holding the 3rd button of D5, when LED flashes twice and goes out, press the 4th button of D5 twice, still holding the 3rd button and press any button of a new CODIPLUG remote control, when LED of D5 flashes 3 times and stays on, it means D5 has copied this new CODIPLUG remote control completely.