



SWING TURNSTILE GATE INSTALATION

摆闸安装说明

Shenzhen Tigerwong Technology Company.,Ltd
深圳市太格王科技有限公司





01

Installation Preparation

安装准备



确定安装环境

Installation
environment
confirmation



硬件配置准备

Hardware
Preparation




安装工具准备

Preparation of
installation tools



施工准备

Construction
preparation

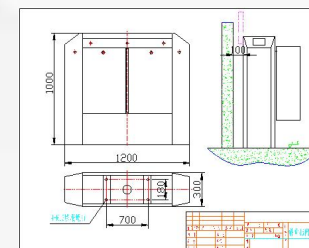

连接线路规划

Diagram

INSTALLATION SITE 安装现场分析



01

Concrete Ground 水泥地面

- 1. Electric drill slotted, slot depth 5 cm
电钻开槽，槽深5公分
- 2. Put the wire into a 2cm diameter PCV tube
把线放进2cm直径的PCV管里
- 3. Put the PVC pipe into the tank
把PVC管放进槽里
- 4. Spread cement
铺上水泥

02

Marble tile floor 大理石瓷砖地面

- 1. Special electric drill slotted, slot depth 5 cm
特殊电钻开槽，槽深5公分
- 2. Put the wire into a 2cm diameter PCV tube
把线放进2cm直径的PCV管里
- 3. Put the PVC pipe into the tank
把PVC管放进槽里
- 4. Spread cement, paved marble material
铺上水泥，铺好大理石材料





03

Iron plate and sand ground 铁板泥沙地面

- 1. Special ground cannot be slotted
场地特殊无法开槽
- 2. Fix the gate by electric welding
用电焊的方法固定闸机
- 3. Weld the bottom of the gate to the iron plate
把闸机底部焊在铁板上

Tools Preparation

安装工具准备

Wire cutters 剪线钳



Network pliers 网线钳




Hammer 锤子



Electrical glue 电工胶



Power cable, Network cable, Signal cable
电源线、网线、信号线

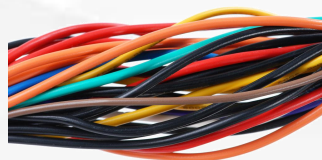

Screwdriver 螺丝刀



Hammer drill 锤钻



Adjustable wrench 活动扳手



Allen wrench set 内六角扳手一套



The background features a light gray geometric pattern of overlapping polygons. On the left, there is a large pink triangle pointing right, with a smaller, lighter pink triangle layered on top of its upper-left portion. On the right, there is a large orange triangle pointing left.

02

Hardware Installation

硬件安装


Swing Turnstile Installation

摆闸安装




①

Open the package and count the goods
打开包装, 清点货物

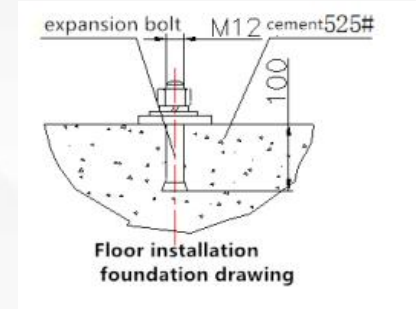


④

Embed expansion bolts, but do not tighten
埋入膨胀螺栓, 但不拧紧

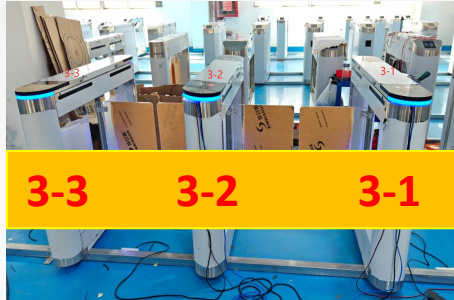

②

Follow the instructions on the film to set up the gate, reserved channel width
按照薄膜上的提示摆好闸机, 预留通道宽

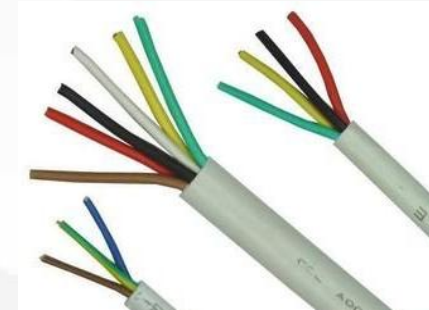

⑤


Dig the duct groove, put the required wire into the PVC pipe, and put it into the duct groove
挖开线管槽, 将所需的电线插入PVC管, 然后将其放入线管槽



Mark the location of the expansion bolt mounting holes and punch holes
标记膨胀螺栓安装孔的位置并打孔


Swing Turnstile Installation

摆闸安装

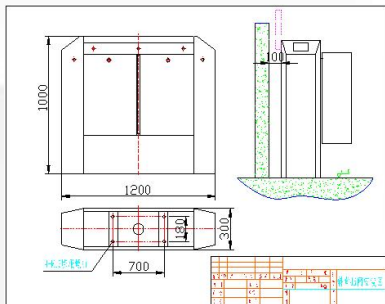

⑥

Move the chassis to the corresponding installation position and align the expansion bolts
将机箱搬到对应的安装位，对准膨胀螺栓空位

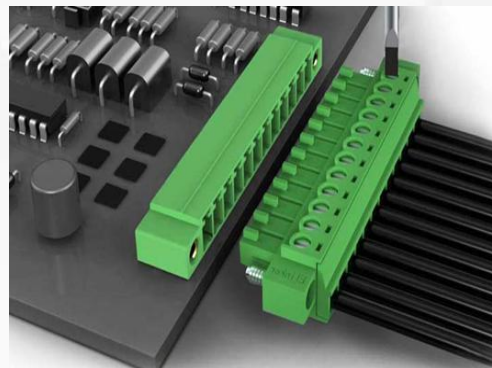

⑧

Connect the equipment cable for debugging
连接设备线，进行调试



⑦

Adjust the chassis position, aligning wings and infrared
调整机箱位置，对准双翼和红外



⑨


After commissioning, tighten the screws to fix the position
调试完成后，拧紧螺钉以固定位置

Wiring diagram


接线图

第一步：检查主从板

Step 1: Check the master-slave board

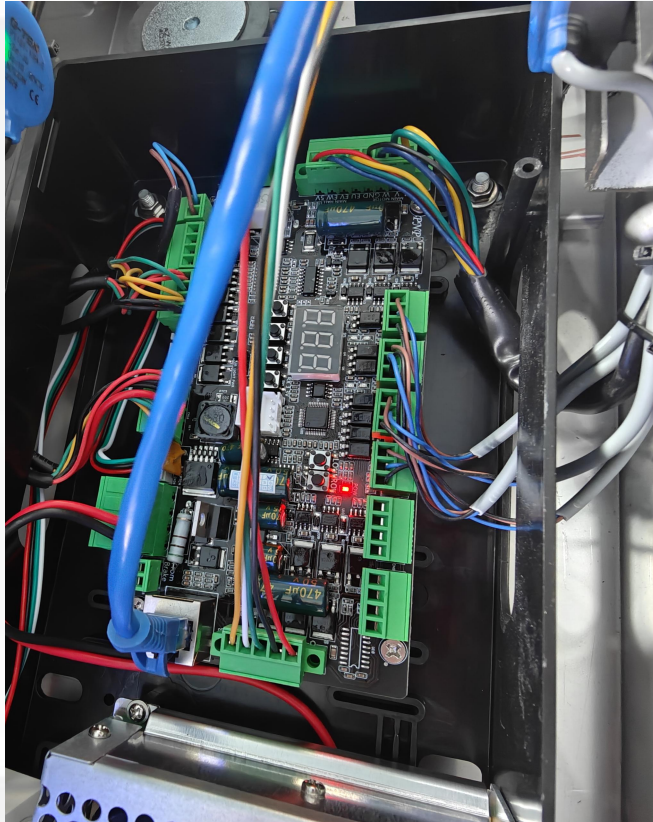

Master

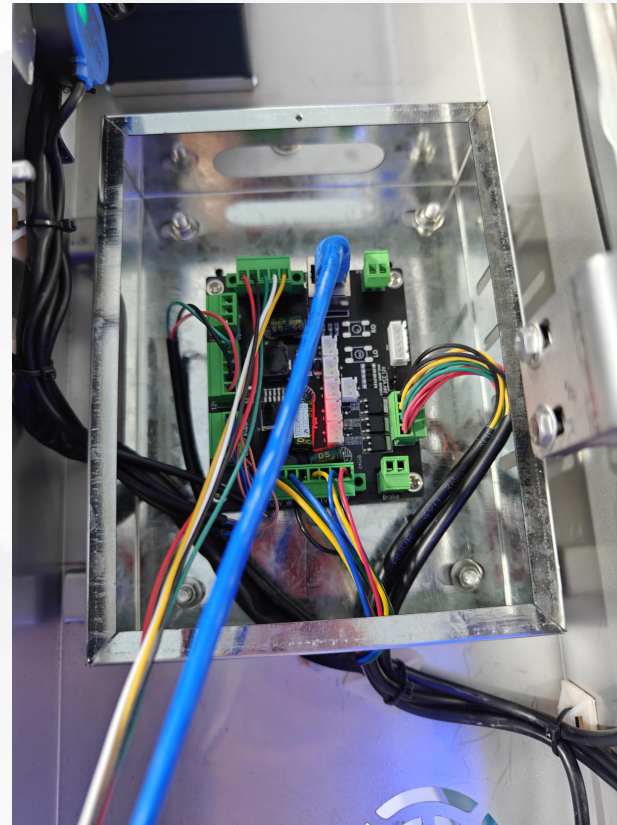


Slaver

Wiring diagram


接线图

第二步：连接主从板

Step 2: Connect the master-slave board synchronization cables

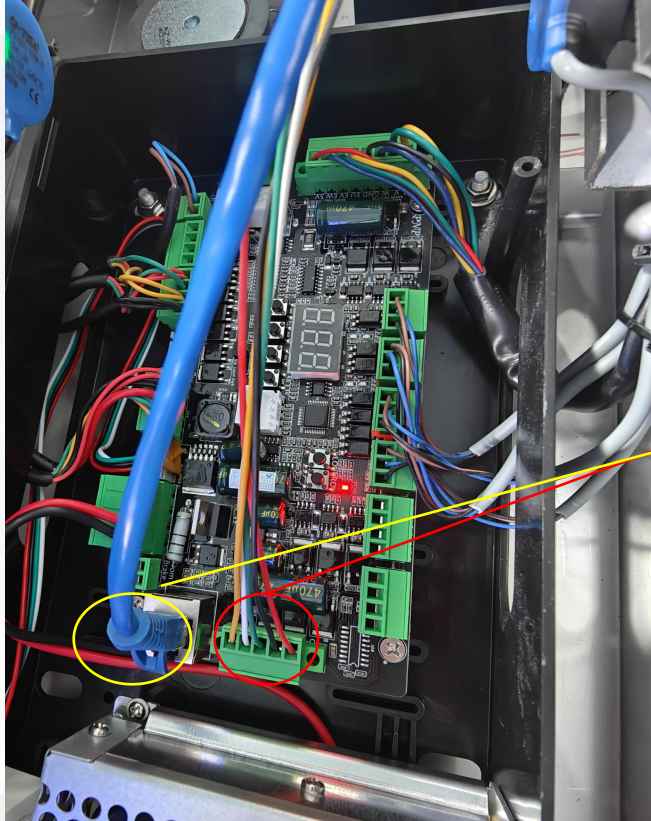

master

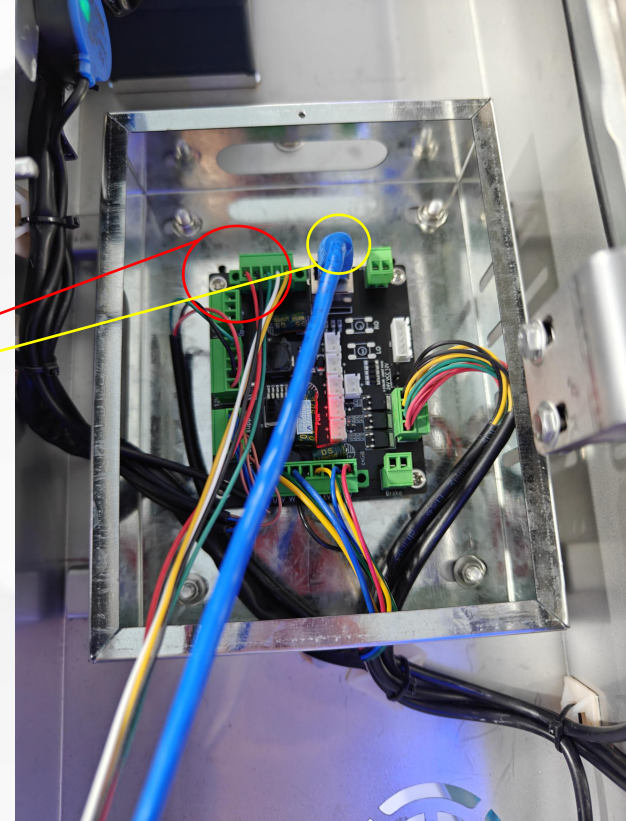


slaver

Wiring diagram

接线图

Step 3: Connect the network cable

Access control board --network cable to network switch-PC,as shown in the picture below:

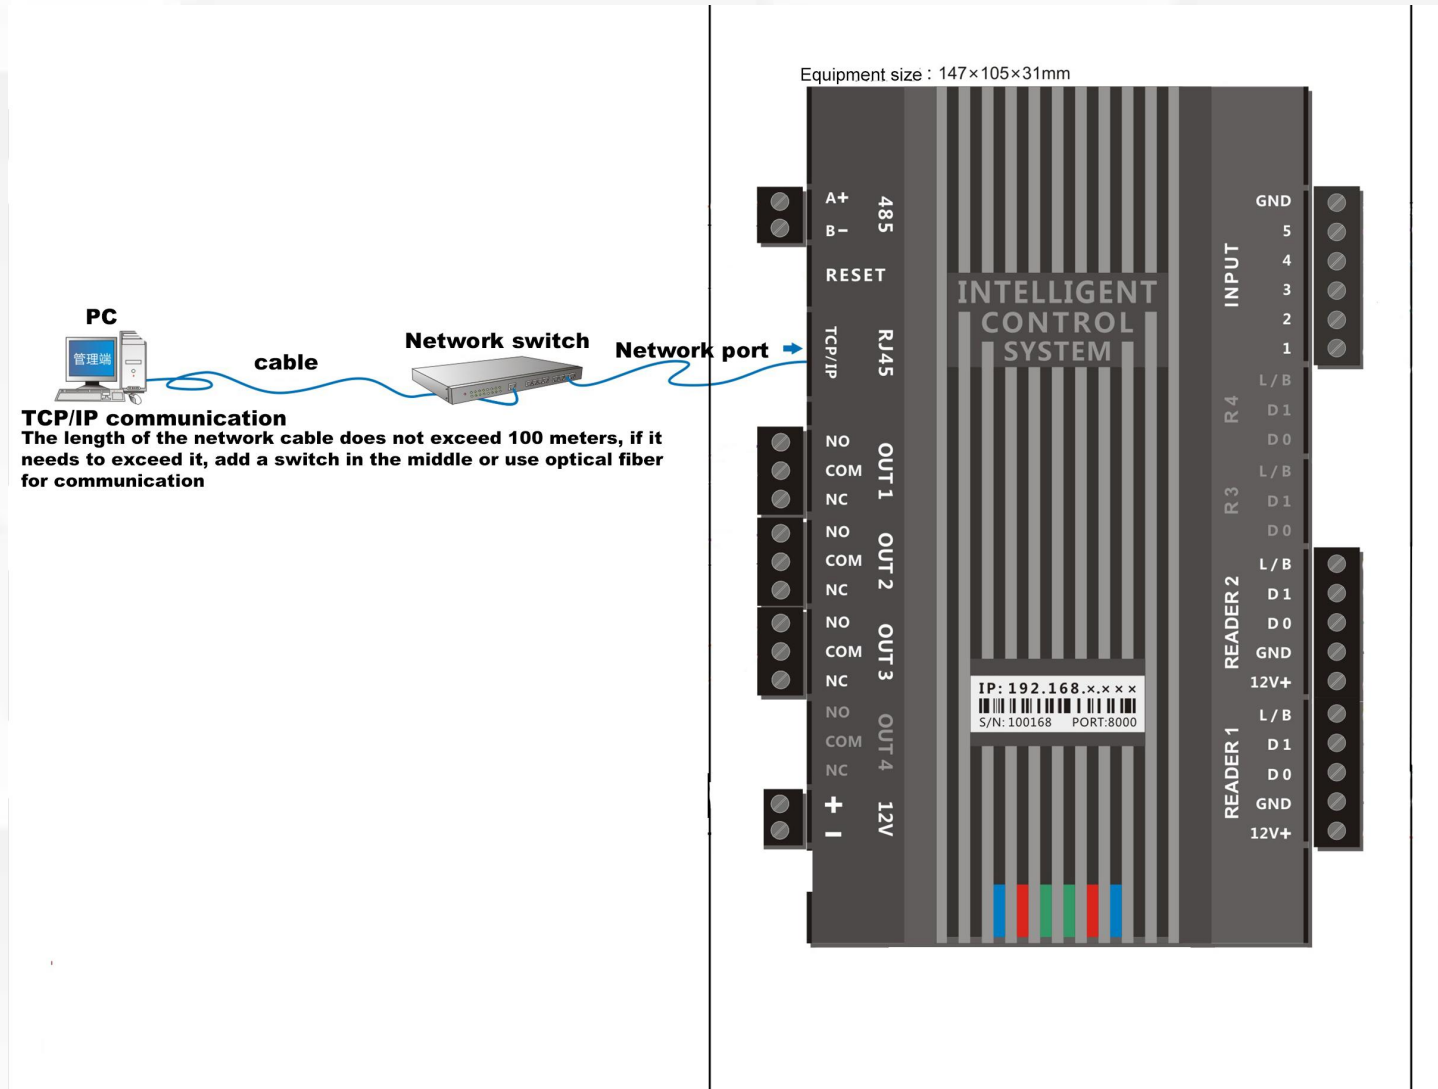


Wiring diagram

接线图

第四步：在下图标明的地方插上电源线

Step 4: Plug in the power cord as shown below

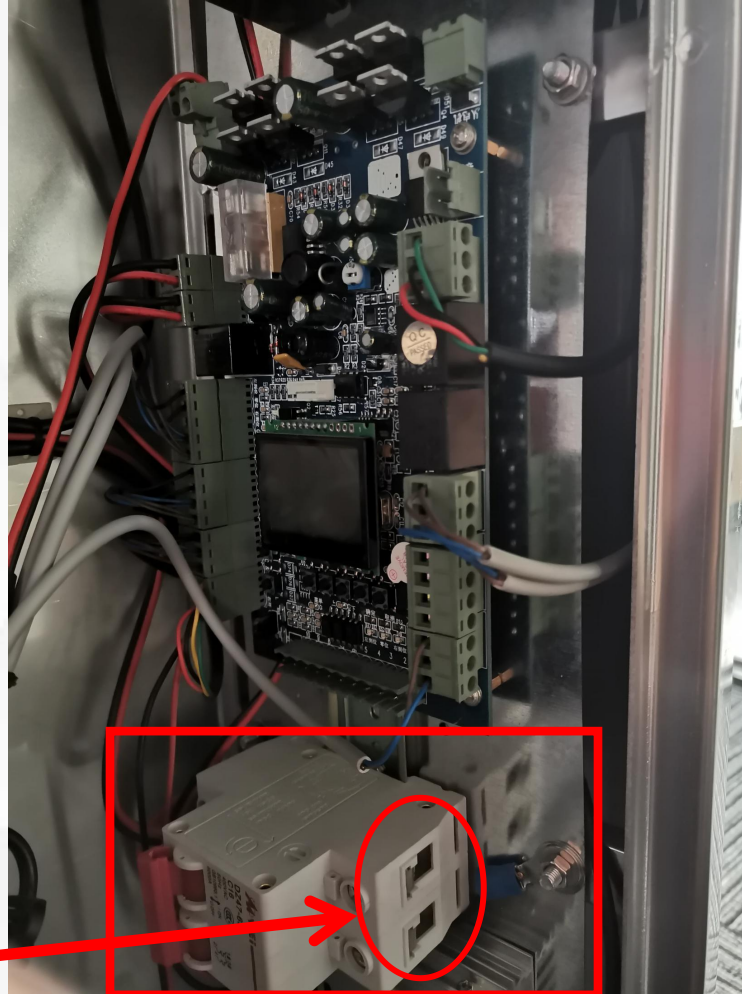

感谢

THANKS

A decorative graphic consisting of several colored dots (blue, dark blue, pink, and light blue) arranged around the word 'THANKS'.